

Εικόνα	Μοντέλο	Ρύθμιση
 <p>The image shows a dark red digital alarm clock with a white antenna on top. The LCD display shows '3.10' on the left and '2.03' on the right. Below the display are several control buttons. A small circular logo with a bird is in the top right corner of the image area.</p>	DGT2010	<b>Πρόγραμμα 19</b>
 <p>The image shows a red digital alarm clock with a white antenna. The LCD display shows '54.30' on the left and '1:23.07' on the right. Below the display are control buttons and the text 'DGT3000'. A small circular logo with a bird is in the top right corner of the image area.</p>	DGT3000	<b>Πρόγραμμα 13</b>
 <p>The image shows a digital alarm clock with a wood-grain finish and a black antenna. The LCD display shows '54.30' on the left and '1:23.07' on the right. Below the display are control buttons and the text 'DGT3000 Limited Edition'. A small circular logo with a bird is in the top right corner of the image area.</p>	DGT3000 LIMITED	<b>Πρόγραμμα 13</b>
 <p>The image shows a red digital alarm clock with a white antenna. The LCD display shows '1:27:48' on the left and '1:36:59' on the right. Below the display are control buttons. A small circular logo with a bird is in the top right corner of the image area.</p>	DGT2500	<b>ΠΡΟΓΡΑΜΜΑ 16</b>
 <p>The image shows a black digital alarm clock with a white antenna. The LCD display shows '0:05:00' on the left and '0:05:00' on the right. Below the display are control buttons. A small circular logo with a bird is in the top right corner of the image area.</p>	LEAP KK09	<ul style="list-style-type: none"> <li><b>ΠΡΟΓΡΑΜΜΑ 4</b></li> </ul>



LEAP KK09

**ПРОГРАММА 4**



Silver

**ПРОГРАММА 11**



CE Premium  
Clock

**ПРОГРАММА 17**



CE  
ClassicClock

**ПРОГРАММА 17**



DGT ECHO  
(DGT3000)

## ΠΡΟΓΡΑΜΜΑ 13



DGT XL

Χειροκίνητη ρύθμιση στο πρόγραμμα **00**. Επιλέγεις **Fischer** από τις επάνω επιλογές  
Κάνεις τα παρακάτω σε κάθε οθόνη (αριστερά και δεξιά):

- Βάζεις **1:30**
- Βάζεις **0.30**
- Βάζεις **00**

Επιλέγεις πάλι **Fischer** από τις επάνω επιλογές

- Βάζεις στην οθόνη **0:30**
- Βάζεις **.00**
- Βάζεις **0.30**

Στις επάνω επιλογές, πηγαίνεις στο **end**

Sistemco

**Δεν υπάρχει πλέον**